


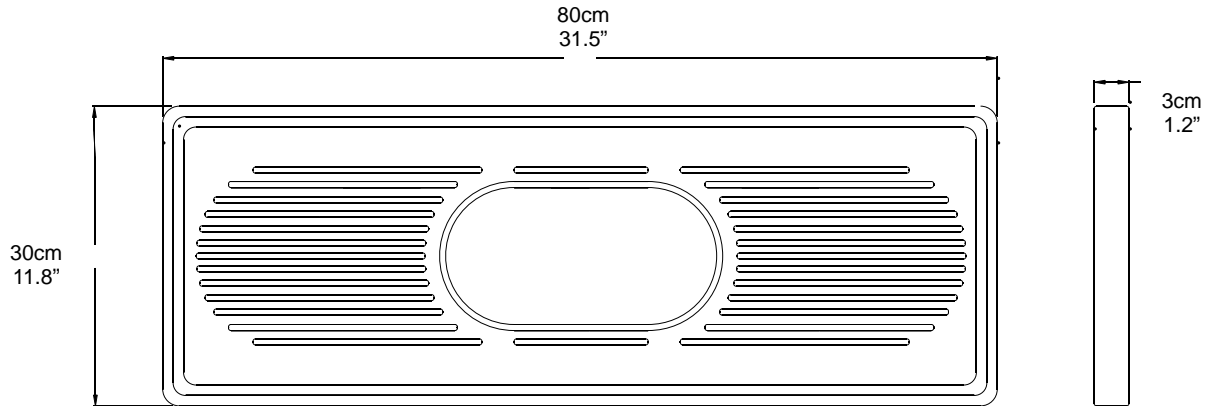

Wall Pad

Calculate Pillar/Post Spacing



MEASURING


Measure the length of one side of the pillar.

As the pads are 1" thick, add 1" to the total length you will require

Example

If the post/pillar side is 20" long, you will need $20" + 1" = 21"$ of wall padding

Since each wall pad is 11.8" wide, you will need one full pad, plus a trimmed pad that is $21" - 11.8" = 9.2"$ wide

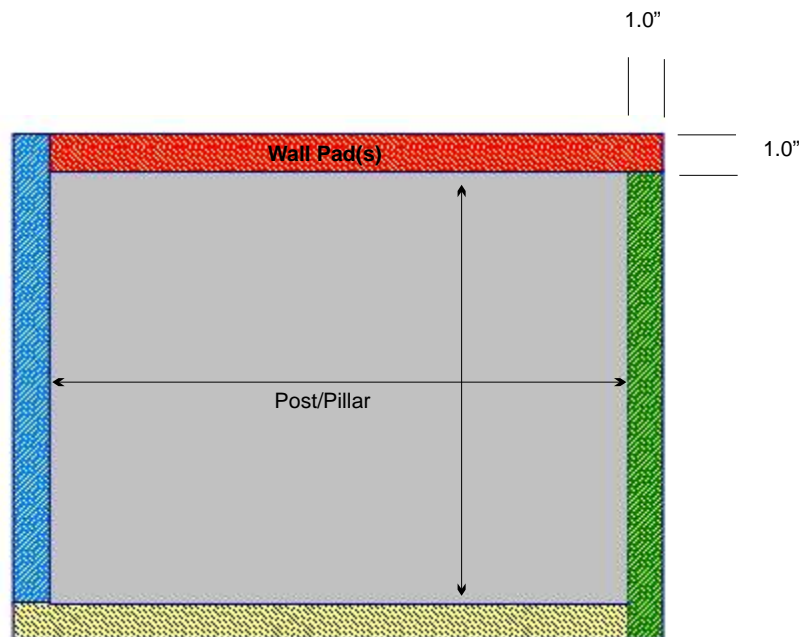

Copyright 2010 www.BoingSafety.com

136 Walker Street, Atlanta GA 30313
 TEL: 404-521-9054 ORDER 800-477-6434 FAX: 404-222-8366
 www.boingsafety.com info@boingsafety.com