


INSTALLATION INSTRUCTIONS - REINFORCED STRIPS


These instructions are for installing strips that have a metal insert.

Tools/Equipment: Drill + 1/8" bit + Phillips screwdriver + hacksaw or 12" Miter Saw w/Diablo Blade.

- 1. Double check measurements to ensure the correct number of *Boing* pieces to do the job
- 2. Cutting to Size
 - the metal reinforced strips can be cut to size with a hacksaw or miter saw. Watch your fingers!!
 - carefully measure your "total" distance to be covered
 - start installation from the 2 **OUTSIDE** ends work toward the middle
 - use full length pieces (1 meter = 39.4") until the space is less than a full piece
 - carefully measure the length of this gap
 - measure and cut a full size piece of padding to fit into the gap
 - see instructions below for making additional holes if necessary

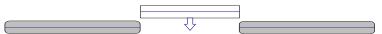

Freud Diablo Non-Ferrous 96T x 12"

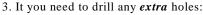

Note: All reinforced strips come with 6 pre-drilled ½" holes and plastic caps.

- use a 1/4" Forstner bit (or same size as head of screw) to drill a "clean" hole through the foam
- use a 1/8" bit to drill down through the aluminum plate
- if possible, drill all the holes off-site so you do not have aluminum shavings to clean up (safety in kids areas!)
- 4. Fill holes to cover screw head
 - if you just used the existing holes, insert plastic caps into the ½" holes to cover the screws
 - the caps are just pressure fit, so you may wish to use some silicone for a more semi-permanent attachment
 - if you drilled your own holes, fill with silicone
- 5. Using silicone to attach reinforced strips:
 - see the basic installation instructions if you do not want to drill holes in the area you want protected
- 6. Option: add a small "bead" of silicone around the outer edges to limit attempts to peel off.
 - clean off any excess silicone see Silicone Removal on website FAQ's
- 7. Silicone takes about 24 hours to fully cure

SILICONE REMOVAL - use DAP "Silicone-Be-Gone" (see DAP website for store locations)

DAILY/WEEKLY CLEANING & MAINTENANCE:

Use any general household cleaner + soft cloth **Do not** use harsh abrasive scrubbing agents

Do not use strong chemicals like Citrus spray or Bleach

