




INSTALLATION AIR GUARD CORNER STRIPS

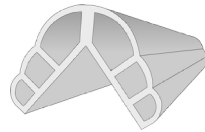

Air Guard Strips are shipped with Peel/Stick tape attached. This tape is very good for most general purpose applications on smooth surfaces such as wood, plastic, or metal.

Adhesive strips will not work on rough or uneven surfaces

Instructions

1. For indoor use only.
2. Clean surface .
 - remove all fingerprints, oil, grease and other dirt that would prevent good adhesion.
 - let dry
3. Make sure the painted surface is not flaking or loose
 - otherwise the adhesive will just peel off
4. Remove protective film, and apply the Air Guard to surface.
 - Press firmly and rub the strip for several minutes
5. Do not touch for 15 minutes until the adhesive is firmly set.

Option

To prevent easy removal of the Air Guard Strips use a stronger adhesive.

1. Remove the protective pink strip as well as the adhesive strip underneath
 - do that for each side
2. Apply Silicone adhesive or Super Glue type adhesive to the bare plastic material

Installation Tips

- read the product manufacturer's installation instructions
- ensure that non-porous surfaces are clean and dry (painted or unpainted)
- use isopropyl (rubbing) alcohol wipes for best cleaning results

Visit **www.boingsafety.com** for installation solutions for our other products.